

HEIDENHAIN



Evaluation Electronics

For Metrology Applications

For many metrology applications, ranging from simple measuring stations to complex inspection systems with multiple measuring points, HEIDENHAIN supports you with compatible evaluation electronics.

Their functionality is always oriented toward the specific application. Whether for an SPC inspection station, profile projector, or measuring microscope, the HEIDENHAIN evaluation electronics for metrology applications are the right choice for your measurement tasks.

Digital readouts from HEIDENHAIN for manually operated machine tools

optimally support the operator with practical cycles for milling, drilling and turning. You can find these digital readouts on the Internet at www.heidenhain.com or in the Digital Readouts and Linear Encoders for Manually Operated Machine Tools brochure.



Evaluation electronics for measurement and inspection tasks



(Further information:

Comprehensive descriptions of all available interfaces as well as general electrical information are included in the Interfaces of HEIDENHAIN Encoders brochure (ID 1078628-xx).

For the required cables, please refer to the Cables and Connectors brochure (ID 1206103-xx).

You can download the operating instructions in the desired language free of charge from the HEIDENHAIN homepage.

This brochure supersedes all previous editions, which thereby become invalid. The basis for ordering from HEIDENHAIN is always the brochure edition valid when the order is placed.

Standards (ISO, EN, etc.) apply only where explicitly stated in the brochure.

Contents

Overview				
	Selection guide	for measurement and inspection tasks	4	
Specifications				
Measurement and inspection tasks	ND 280: evaluation unit for simple measuring and positioning tasks			
	ND 287: evaluat	tion unit for measuring and inspection stations	8	
	GAGE-CHEK 20	000 : evaluation unit for demanding measured-value acquisition	10	
	EIB 700: signal of	converter for computer-aided measured-value acquisition	16	
	IK 220: signal co	onverter for computer-aided measured-value acquisition	18	
Mounting				
Dimensions and installation	ND 200			
	EIB 700			
	GAGE-CHEK 2000			
	Accessory: adap	oter connectors	24	
	Accessory: exte	ernal operating element	24	
Electrical connection				
	Interfaces	Overview	25	
		Optional assemblies for the ND 287	26	
		Switching inputs/outputs on the ND 287	27	
		EIB 700 and IK 220 evaluation electronics	29	
		Encoder inputs	31	
		EIB application software for the EIB 700	34	

Selection guide

Measurement and inspection tasks

	Screen	Axes	Functions
		Length Angle	
ND 200 Evaluation unit for	Monochrome	1 (adjustable)	-
 Measurement equipment Adjustment and inspection equipment SPC inspection stations Simple infeed and positioning tasks 	Color	Up to 2 (adjustable)	Metrological and statistical functions (sorting and tolerance checking, measurement series, SPC)
GAGE-CHEK 2000 Evaluation unit for Positioning equipment Measuring fixtures Adjustment and inspection equipment	Color touchscreen	Up to 3 (adjustable)	 Acquisition of precise measured values, and spot-on positioning in metrology applications 100 presets Dial gage: comparison of the displayed value with nominal value, warning threshold and tolerance threshold Measurement series with minimum and maximum value recording Difference of minimum and maximum values (range) Measurement of master parts (mastering) Data transfer either manually, continuously, or triggered by touch probe or switching function Diameter/radius display Relative measurement Probing functions: edge, centerline and circle User administration Configurability of each axis for length or angle display Coupled axis for sum measurement or differential measurement
EIB 700 Signal converter for computer-aided measured-value acquisition on • Measuring machines • Inspection stations • Multi-gauging fixtures • Mobile data acquisition	PC screen	4 (adjustable)	Precise position measurement; updating rate of up to 50 kHz Programmable measured-value inputs Internal and external measured-value triggers Measured-value memory for typically 250 000 measured values per channel Standard Ethernet interface connection to higher-level computer systems
IK 220 Signal converter as a PCI slot card for computer-aided measured-value acquisition on measuring and inspection stations	PC screen	2 (adjustable)	 Programmable measured-value inputs Internal and external measured-value triggers Measured-value memory for 8192 measured values per channel

Options/Additional functions	Model	Page
_	ND 280	6
Second encoder for sum/difference display, temperature compensation	ND 287	8
-	GC 2013	10
	GC 2023	
	GC 2093	
	GC 2013 I/O	




ND 287



GAGE-CHEK 2000



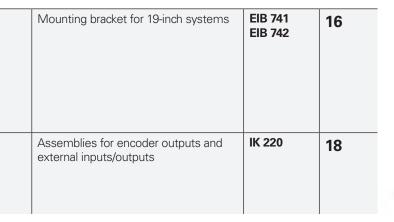



ND 280

Evaluation unit for simple measuring and positioning tasks

9.061.7 9.061.7 • 1 2 3 • C ENTER

The ND 280 evaluation unit for one axis is suitable for measuring and inspection stations, as well as simple positioning tasks. The universal encoder input permits the connection of all incremental encoders with 11 μ App and 1 Vpp signals, and absolute encoders with the EnDat 2.2 interface from HEIDENHAIN.

Design

The ND 200 series features a sturdy aluminum die-cast housing. Its splash-proof, full-travel keyboard is built to handle shopfloor conditions. For displaying the measured values, a graphics-capable screen shows the status display and soft keys.

Functions

The **ND 280** digital readout provides all of the key functions for simple measuring and positioning tasks. Expanded functionality is offered by the ND 287 evaluation unit (e.g., for metrological acquisition and statistical analysis of measured values). Thanks to its switching inputs and outputs, the ND 287 can also be deployed in simple automated environments (see p. 8).

Data interfaces

The ND 280 is equipped with serial interfaces for the transmission of measured values to a PC or printer, for the input/output of parameter lists and compensation value lists, and for diagnostics: USB

RS-232-C/V.24



	ND 280
Axes	One
Encoder inputs	\sim 1 V _{PP} , \sim 11 μ A _{PP} or EnDat ¹⁾ : 15-pin D-sub (female, automatic interface detection)
Input frequency	1 V _{PP} : ≤ 500 kHz 11 μA _{PP} : ≤ 100 kHz
Subdivision factor	4096-fold
Display step ²⁾	Adjustable, max. 9 digits Linear axis: 0.5 µm to 0.002 µm Angular axis: 0.5° to 0.00001° or 00°00′00.1″
Display	Monochrome TFT screen
	Position values, dialog boxes, input fields, graphing functions and soft keys
Status display	Operating mode, REF, preset, scaling factor, compensation, stopwatch, unit of measure, soft-key level
Functions	 REF reference-mark evaluation for distance-coded or single reference marks Two presets Distance-to-go mode Integrated help and diagnostics External operation via serial interface
Axis-error compensation	Linear axis: linear and segmented linear via 200 compensation points Angular axis: segmented linear with 180 compensation points (every 2°)
Data interface	RS-232-C/V.24 USB (Type B)
Power connection	AC 100 V to 240 V (–15% to +10%), 48 Hz to 62 Hz; 30 W
Operating temperature	0 °C to 50 °C (storage temperature: –40 °C to 85 °C)
Protection EN 60529	IP40; front panel: IP54
Mass	≈ 2.5 kg

Purely serial, with no evaluation of incremental signals

Depends on the signal period of the connected encoder (Display step ≈ Signal period/4096)

ND 287

Evaluation unit for measuring and inspection stations

Thanks to its extensive functionality, the ND 287 evaluation unit for one axis is well suited for measuring and inspection stations, and can also be used for simple positioning tasks. The universal encoder input permits the connection of all incremental encoders with 11 μ App and 1 Vpp signals, and absolute encoders with the EnDat 2.2 interface from HEIDENHAIN.

Design

The ND 287 features a sturdy aluminum die-cast housing. For displaying the measured values, a graphics-capable screen shows the status display and soft keys. Its splash-proof, full-travel keyboard is designed to handle the shop floor.

Functions

The **ND 287** provides numerous functions for the metrological acquisition of individual values, including functions such as sorting and tolerance check mode, minimum and maximum value recording and measurement series storage. Based on these data, mean values and standard deviations can be calculated and displayed in histograms or control charts. Thanks to its modular design, the ND 287 permits the connection of a second encoder for sum/difference measurement, or the connection of an analog sensor (e.g., for temperature compensation).

Data interfaces

The ND 287 is equipped with serial interfaces for the transmission of measured values to a PC or printer, for the input/output of parameter lists and compensation value lists, and for diagnostics:

- USB
- RS-232-C/V.24
- Ethernet 100BaseT (option)

The transmission of measured values can be initiated on the ND keyboard or via an external command. With RS-232-C/V.24, this is done using the software command CTRL+B or a configurable internal clock.

Sorting and tolerance checking

With the sorting and tolerance checking function of the ND 287, workpieces can be inspected for dimensional accuracy and sorted into classes. The result is shown through symbols in the color status display, with a corresponding signal applied at the switching outputs.

Display freeze

For readability, even during rapidly changing measured values, the display can be frozen with an external signal. The internal counter keeps on running.

Mathematical consideration of a second encoder

A second encoder or a sensor can be connected to the ND 287 through an optional **encoder module** or **analog module** input assembly. The data from the two encoders can be taken into account mathematically via operands. The result and the two measured values are saved. This opens up further areas of application, such as sum/difference display of two encoders or temperature compensation by means of a temperature sensor.

Recording and evaluating measurement series

The ND 287 provides a measured-value memory for the storage of measurement series. Alternatively, during the measurement series, the minimum, maximum, or difference can be displayed. The displayed value can also be checked for tolerance conformity with the sorting function. The saved measured values are evaluated and displayed in the following ways:


- Statistical view (mean value x, standard deviation s, and range r)
- Diagram (graph of the measured values with minimum, maximum and mean values, as well as tolerance limits)
- Measured value overview as a table

Statistical Process Control (SPC)


For SPC, the ND 287 saves up to 1000 measured values in its nonvolatile FIFO memory. Evaluation is performed with the following functions:

- Statistical view of the measured values in the FIFO memory
- Measured value overview as a table
- Diagram of the last 30 measured values
- Histogram in ten classes with probability density function and process capability indexes Cp and Cpk.
- Control charts for mean value x, standard deviation s, and range r




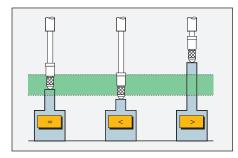


Sorting and tolerance checking

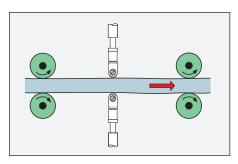

Sum measurement

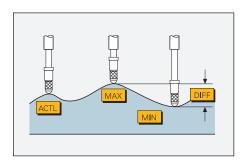

Measured value acquisition

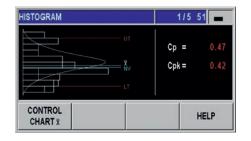

	ND 287		
Axes	One; option: second input through encoder module		
Encoder inputs	\sim 1 V _{PP} , \sim 11 μ A _{PP} or EnDat ¹⁾ : 15-pin D-sub (female, automatic interface detection)		
Input frequency	 1 V_{PP}: ≤ 500 kHz 11 μA_{PP}: ≤ 100 kHz 		
Subdivision factor	4096-fold		
Display step ²⁾	Adjustable, max. 9 digits Linear axis: 0.5 μm to 0.002 μm Angular axis: 0.5° to 0.00001° or 00°00′00.1″		
Analog input	Option: ±10 V via analog module; resolution: 5 mV		
Display	Screen for position values, dialog boxes, input fields, graphing functions and soft keys		
Functions	 REF reference-mark evaluation for distance-coded or single reference marks Two presets and distance-to-go mode External operation via serial interface Sorting and tolerance checking Measurement series with minimum and maximum value recording Storage of measured values (up to 10 000) Functions for statistical process control (SPC) Graphical depiction of distribution/histogram Sum/difference display (with second encoder module) Thermal compensation (with analog module) 		
Axis-error compensation	Linear axis: linear and segmented linear via 200 compensation points Angular axis: segmented linear with 180 compensation points (every 2°)		
Data interface	RS-232-C/V.24; USB (Type B); option: Ethernet 100BaseT, via Ethernet module		
Switching outputs for automation tasks	 Zero crossover; trigger points 1 and 2 Sorting signals "<" and ">" Errors 		
Switching inputs for automation tasks	 Zero reset, set displayed value Move to reference point and ignore reference signals Measured value output or display freeze Start measurement series Minimum, maximum and difference display Gating of the two encoder inputs Sum or difference display Display of measured value 1 or measured value 2 		
Accessories	Mounting adapter, encoder module, analog module, Ethernet module		
Power connection	AC 100 V to 240 V (–15% to +10%), 48 Hz to 62 Hz; 30 W		
Operating temperature	0 °C to 50 °C (storage temperature: –40 °C to 85 °C)		
Protection EN 60529	IP40; front panel: IP54		
Mass	≈ 2.5 kg		

¹⁾ Purely serial, with no evaluation of incremental signals
2) Depends on the signal period of the connected encoder (Display step ≈ Signal period/4096)

GAGE-CHEK 2000

Evaluation unit for demanding measured-value acquisition

The GAGE-CHEK 2000 evaluation unit is particularly well suited for positioning tasks on positioning, measuring, adjustment and inspection equipment, as well as for the retrofitting of measuring machines in order to collect and transmit data to a PC.

Design

Thanks to its rugged industrial design, the GAGE-CHEK 2000 is superbly suited for applications in measuring rooms and harsh production environments. Its slim aluminum housing, featuring an integrated power adapter and fanless passive cooling system, is exceptionally sturdy and resilient. The unit's straightforward touchscreen, made of specially hardened glass, supports multi-touch gesture control and permits operation with gloves.

Functions

The logical arrangement of menus and function elements provides intuitive user guidance, which supports you while using the different functions. Along with the typical functionality of an evaluation unit, such as zero resetting and preset setting, the GAGE-CHEK 2000 also offers the following practical features:

- Dial gage for a graph of the measured value
- Measurement series with minimum and maximum value recording
- Measurement of master parts (mastering)
- Coupled axis for sum measurement or differential measurement
- Probing functions
- Manual, continuous, touch-probetriggered, or switching-function triggered measured value output

Data transmission

The measurements can be transmitted via the data interfaces to a PC for processing. The GAGE-CHEK 2000 supports data transmission via RS-232 (adapter) or via Ethernet. For data transmission via Ethernet, HEIDENHAIN supports the MQTT and REST network protocols.

Remote access

The GAGE-CHEK 2000 provides various possibilities for remote access:

- Switching functions
- Position-dependent switching functions
- RS-232 serial interface
- Ethernet

Configurable axis names

The axis names shown in the display can be changed to meet the requirements of the given application. By means of an alias assignment, you can easily change the names of the X, Y and Z axes. The axis names may contain any combination of up to two letters and/or numbers.





Intuitive display

All of the information you need is displayed in a clean and easy-to-read format on the unit's high-resolution, 7-inch screen. Only those functions that are actually available within a given context and situation are shown. The self-explanatory operating elements provide intuitive user guidance.

Management of parts

The GAGE-CHEK 2000 allows you to configure functions for various objects of measurement and to store them in a structured manner in the function bar. The required measurement functions can thus be selected quickly and easily.



Diameter/radius display

The "D/R" (diameter/radius) function can be used for radial measurements on rotationally symmetrical parts; for example, in order to switch between the displayed radius and the equivalent diameter. The axes to be given this switching capability can be configured within the function, which can be used on linear axes or on angular axes displayed as linear axes.

Sum/differential measurement

With the coupled axis, two encoder inputs can be shown linked in the position display. For this purpose, the two encoder inputs are offset against each other as a sum or difference. The result is shown as coupled axis in the position display.

	GAGE-CHEK 2013 GAGE-CHEK 2013 I/O	GAGE-CHEK 2023	GAGE-CHEK 2093	
Axes	Up to three axes			
Encoder interface	∕ 1 Vpp, ∕ 11 μApp, EnDat 2.2	ПШПІ	1 connection: ΓΔ TTL 2 connections: 1 V _{PP} , 11 μA _{PP} , EnDat 2.2	
Input frequency	 1 V_{PP}: ≤ 400 kHz 11 μA_{PP}: ≤ 150 kHz 	≤ 5 MHz	1 V _{PP} : ≤ 400 kHz 11 µA _{PP} : ≤ 150 kHz □ TTL: ≤ 5 MHz	
Subdivision factor	4096-fold (only with 1 V _{PP})			
Display step	Configurable, up to eight digits Linear axes X, Y, and Z: down to C Angular axis Q: down to C	0.000 01 mm 0.000 01° (00° 00′ 00.1″)		
Display	7-inch screen (15:9) for multitouch operation; resolution: WVGA 800 x 480 pixels for dialog boxes, input fields, position values and graphing functions			
Functions	 Acquisition of precise measured values, and spot-on positioning in metrology applications 100 presets Dial gage for a graph of the measured value Measurement series with minimum and maximum value recording Difference of minimum and maximum values (range) Measurement of master parts (mastering) Data transfer either manually, continuously, or triggered by touch probe or switching function Diameter/radius display Relative measurement Probing functions (edge, centerline and circle) User administration Configurability of each axis for length or angle display Coupled axis for sum measurement or differential measurement 			
Error compensation		 Linear (LEC) and segmented linear (SLEC) using up to 200 compensation points Squareness calibration; matrix compensation (NLEC) using up to 99 x 99 points 		
Data interface	1x Ethernet 100 Mbit/1 Gbit (RJ45); 1x Hi-Speed USB 2.0 (Type A)		
Other connections	Foot switch for two functions	Foot switch for two functions		
Accessories	Multi-Pos, Duo-Pos and Single-Pos	Multi-Pos, Duo-Pos and Single-Pos stands, Multi-Pos holder, power cable, adapter connector, foot switch		
Power connection	AC 100 V to 240 V (±10%); 50 Hz to 60 Hz (±5%); ≤ 38 W			
Operating temperature	0 °C to +45 °C (storage temperatu	re: -20 °C to +70 °C)		
Protection EN 60529	IP65; back panel: IP40			
Mounting	Multi-Pos, Duo-Pos, or Single-Pos	stand; Multi-Pos holder; 50 mm × 5	0 mm mounting hole pattern	
Mass	GC 2013, GC 2023, GC 2093: ≈ 1.3 kg GC 2013 I/O: ≈ 1.5 kg			


Connectivity of GC 2013, GC 2023, GC 2093 versus GC 2013 I/O

	GAGE-CHEK 2013 GAGE-CHEK 2023 GAGE-CHEK 2093	GAGE-CHEK 2013 I/O
Digital inputs		
TTL 0 V to 5 V	4	4
HIGH DC 11 V to 30 V, 2.1 mA to 6.0 mA LOW DC 3 V to 2.2 V, 0.43 mA	-	24
Digital outputs		
TTL 0 V to +5 V; max. load = 1 $k\Omega$	1	1
DC 24 V (20.4 V to 28.8 V); max. 150 mA per channel	-	8
Relay outputs Max. switching voltage: AC/DC 30 V; max.: 0.5 A; max.: 15 W; max. continuous current: 0.5 A	-	2
Analog inputs Voltage range: DC 0 V to 5 V Resistance range: $100~\Omega \le R \le 50~k\Omega$	-	4
Analog outputs Voltage range: DC –10 V to +10 V Max. load: 1 $k\Omega$	-	4
5 V voltage outputs Voltage tolerance: ±5%; max. current: 100 mA	-	1
Touch probe connection Voltage supply: DC 5 V or DC 12 V		
Digital inputs: TTL 0 V to 5 V (low active)	4	4
Digital outputs: TTL 0 V to 5 V; max. load = 1 $k\Omega$	1	1

Functions

Configurable function elements

The functionality of the GAGE-CHEK 2000 can be adapted to the given requirements through individually configurable function elements in the Inspector view. Along with function elements for the output of measured values, functions such as a preset table and the storage of minimum and maximum values are available as well.

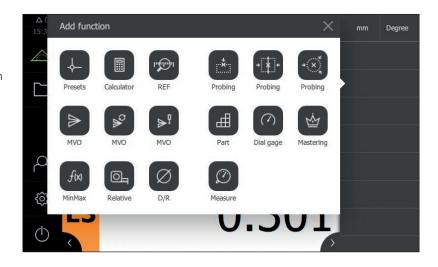

Dial gage

The dial gage function lets you make a direct comparison between the acquired measured values and the nominal value, warning limits and tolerance limits. The measured values are shown as a graph in the form of a dial gage. For evaluation, the GAGE-CHEK 2000 supports you with a color depiction of a dial gage.



Mastering

With the mastering function, you can reduce influences on the measurement results of a measurement series by using master parts. For this purpose, the master part with its known dimensions is measured regularly. The documented measured values of the master part are taken over either individually or entirely in the position display of the corresponding axes. Regular mastering helps you to improve the accuracy of your measurement series. In addition, you can reuse the measuring setup quickly and easily for new measured objects.



Recording minimum and maximum values (MinMax)

The GAGE-CHEK 2000 is equipped with a function for recording minimum and maximum values. This function can be configured for the axes as desired. The highest and lowest measured values of a measurement series, including their difference, are recorded and can be output over the data interface. This function is particularly advantageous for radial run-out inspection.



Probing functions

The probing functions support you in determining positions and presets. For these purposes, the GAGE-CHEK 2000 provides edge, centerline and circle-center probing functions.



Configurable data formats for measured-value output

For RS-232 data transmission, the GAGE-CHEK 2000 provides a default format and the option of storing your own data formats for data transfer. Thanks to the configurability of its data formats, the GAGE-CHEK 2000 is particularly effective as a data logger on retrofitted, manually operated measuring machines. Within such applications, the GAGE-CHEK 2000 captures the measured values and relays them to a higher-level PC for processing.



EIB 700

Signal converter for computer-aided measured-value acquisition

For use as evaluation units, the EIB 700 signal converters feature connections for four encoders. These units are particularly well suited for the following applications:

- Precise position measurement, especially for inspection stations and multi-gauging fixtures
- Portable, on-site data acquisition (e.g., for machine calibration)
- Integration into customized applications (e.g., high-precision measuring machines)

The EIB 700 series is ideal for applications requiring high-resolution encoder signals and rapid measured-value acquisition. Its Ethernet transmission also enables the use of switches or hubs for connecting more than one EIB. Wireless LAN transmission, for example, can be used as well.

Design

The EIB 700 features a bench-top housing. With a mounting bracket accessory, it can also be easily installed into a 19-inch housing. The device is suitable for the following supply voltages:

EIB 741: AC 100 V to 240 V

EIB 742: DC 24 V

Functions

For **measured-value generation**, the EIB 700 subdivides the signal periods of the incremental signals up to 4096-fold. Automatic adjustment of the sinusoidal incremental signals reduces the error within one signal period.

And thanks to its **measured-value memory**, the EIB 700 series can typically save 250 000 measured values per axis. Based on the axis, these measured values can be saved by means of either an internal or external trigger.

The **interval counter** permits position-dependent triggering in conjunction with an incremental encoder on Axis 1. For this purpose, the signals of Axis 1 are interpolated and forwarded to a position counter. Triggering pulses are generated either at a certain position or equidistantly at configurable intervals. They are continuously generated once a configurable starting position is crossed in either counting direction. The trigger pulses can be used to trigger further internal axes of the EIB or can also be output over a trigger output.



Data interface

A standard Ethernet interface using TCP/IP or UDP communication is available for **data output**, permitting direct connection to a PC, laptop, or industrial PC. The type of measured-value transmission can be selected through the operating mode (single values, as a block, or upon software request).

For **processing the measured values** on a PC, software drivers for Windows, Linux and LabVIEW are included in delivery, as are example programs and the EIB application software. The software driver makes it easy to program customized applications, and the example programs demonstrate the potential of the EIB 700 series. The EIB application software aids with setting up and demonstrating the capabilities of the EIB 700 series. This software is provided as source code and can serve as a platform for the development of one's own applications.

Operating modes	Soft Real-Time	Recording	Streaming	Polling
Properties	Immediate transmission of the measured value upon occurrence of the triggering event	Storage of measured values in the EIB's internal measured-value memory	Buffering and block transmission of measured values	Software request originating from the customer's application
Selectable trigger sources	All internal and external sources			Via software command
Trigger rate	≤ 10 kHz (access time to position values < 100 μs)	≤ 50 kHz	≤ 50 kHz Up to 1 200 000 bytes/s	Depends on the application
Typical applications	Closed Loop control	Very high recording rate Offline data analysis	High recording rate in combination with high recording depth	Semi-static measured value recording

	EIB 741 EIB 742				
Encoder inputs	15-pin D-sub connections (female, X11 to X14), for four encoding	ders			
Interface (switchable)	\sim 1 V _{PP} , \sim 11 μ A _{PP} EnDat 2.1 EnDat 2.2				
Supply voltage for encoders	DC 5.12 V ±0.15 V; max. 450 mA per channel Overcurrent protection (automatic switch-off, resettable) at 5	DC 5.12 V ±0.15 V; max. 450 mA per channel Overcurrent protection (automatic switch-off, resettable) at 550 mA			
Input frequency	≤ 500 kHz	≤ 500 kHz			
Subdivision factor	4096-fold	_	-		
Signal adjustment	Automatic adjustment of offset, phase and amplitude	_	-		
Cable length ¹⁾	≤ 150 m	≤ 150 m	≤ 100 m		
Data register for measured values	48 bits (of which only 44 bits are used)				
Interval counter	Derived from Axis 1 (only 1 V _{PP}) ²⁾ , Configurable interpolation factor from 1-fold to 100-fold Can be used as a trigger source or additional counting axis				
Measured-value memory	Typically 250 000 position values per channel		l		
Measured-value trigger ³⁾	Storage of the measured values of the four axes through an external or internal trigger (selectable). External: Signal via trigger input Software command (over Ethernet) Internal: Timer and interval counter Reference pulse of the respective axis (from Axis 1 and other axes)				
Trigger input ⁴⁾	9-pin D-sub connection (male); differential inputs as per RS-485 (terminating resistors can be activated)				
Trigger output ⁴⁾	9-pin D-sub connection (female); four differential outputs as per RS-485				
Access to measured values	Depends on the selected operating mode (see separate table)				
Software	 Software drivers for Windows, Linux and LabVIEW Example programs EIB application software 				
Data interface ⁵⁾	Ethernet as per IEEE 802.3 (10/100/1000 Mbit/s)				
Network address	Automatic assignment through Dynamic Host Configuration Protocol (DHCP), or manual assignment				
Dimensions	Approx. 213 mm x 152 mm x 42 mm				
Operating temperature	0 °C to 45 °C (storage temperature: 0 °C to +70 °C)				
Supply voltage	EIB 741: AC 100 V to 240 V (±10%), 50 Hz to 60 Hz (±2%); max. power consumption: 30 W EIB 742: DC 24 V (–15%/+20%), max. 2 A				

¹⁾ The supply voltage range of the encoder must be maintained; specified cable length applies when HEIDENHAIN cables are used.
2) Maximum input frequency during referencing: 70 kHz
3) Various trigger sources can be assigned to the individual axes.
4) Can also be used as logical input or output
5) The quality of the data cable between the EIB and PC must be adapted to the transmission rate and cable length.

IK 220

Signal converter for computer-aided measured-value acquisition

The IK 220 signal converter is an evaluation unit for two axes. As a PC counter card, the IK 220 can be inserted directly into a free PCI slot on the computer.

Design

Connectable to the IK 220 are two HEIDENHAIN encoders with sinusoidal current signals (\sim 11 μA_{PP}), sinusoidal voltage signals (\sim 1 V_{PP}), or an EnDat 2.1 or SSI interface. External latch inputs/ outputs and the output of encoder signals (\sim 11 μA_{PP}) can be implemented by means of additional slot covers (accessory).




The IK 220 subdivides the signal periods of the sinusoidal encoder signals up to 4096-fold. The signals are called and stored through either external latch inputs or software.

The IK 220 features an integrated **measured value memory.** A total of up to 8192 measured values can be stored in the buffer memory and can be output as a single block.

Further processing of the measured values in the PC is performed by operator-created programs. To demonstrate the possibilities of the PC counter card, example programs and a software driver are included in delivery.



Basic circuit diagram

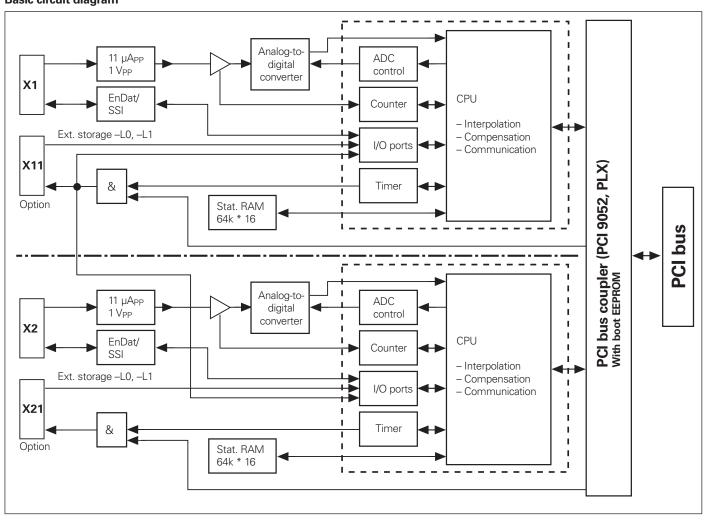

	IK 220			
Encoder inputs	15-pin D-sub connections (male, X1 and X2), for two encoders			
Input signals (switchable)	√ 1 V _{PP}	∕ 11 µApp	EnDat 2.1	SSI
Input frequency	≤ 500 kHz	≤ 33 kHz	-	
Cable length ¹⁾	≤ 60 m		≤ 10 m	
Adjustment of encoder signals	Adjustment of offset, pha	se and amplitude by the so	oftware	
Signal subdivision	4096-fold			
Data register for measured values	48 bits; of which only 44 l	48 bits; of which only 44 bits are used for the measured value		
Internal memory	For 8192 position values			
Measured-value trigger	Through the following (selectable): • External latch signals (over separate IK assembly for external inputs/outputs) • Software command • Timers • Traversing of reference marks			
Access time to measured values	 Without adjustment, without compensation run: ≤ 100 μs With adjustment, without compensation run: ≤ 110 μs With adjustment, with compensation run: ≤ 160 μs 			
Interface	PCI bus (plug and play) Lo	ocal Bus Specification Rev.	2.1	
Software driver and demonstration program	For Windows 7 (32-bit and 64-bit) In VISUAL C++, VISUAL BASIC and BORLAND DELPHI included in delivery Via download: Windows 10 (64-bit)			
Outputs for encoder signals	11 μApp Via PCB connector on the IK (10-pin, female) Fitting cable assembly with PC-slot cover optionally available			
Power consumption	Approx. 4 W, without encoders			
Dimensions	190 mm x 100 mm			
Operating temperature	0 °C to 55 °C (storage temperature: –30 °C to 70 °C)			

¹⁾ With HEIDENHAIN cable; longer cable lengths upon request

Mounting

Mounting the ND 200

ND 200 series

The ND 200 series digital readouts were designed as benchtop units and can be easily stacked. Recesses on the top prevent the stacked units from shifting out of place.

Through threaded holes at the bottom, the ND 28x can be fastened to a base plate with M4 screws.


Two side-by-side ND 28x readouts fit inside a 19-inch housing. For mounting inside a 19-inch housing, a mounting adapter is available as an accessory.


Accessories


Mounting adapter for 19-inch housing ID 654020-01



ND 287

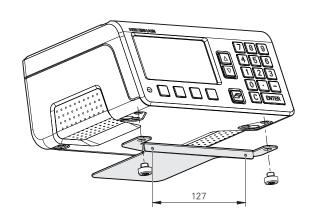

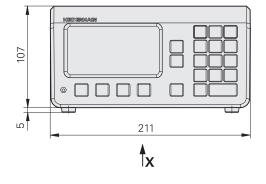

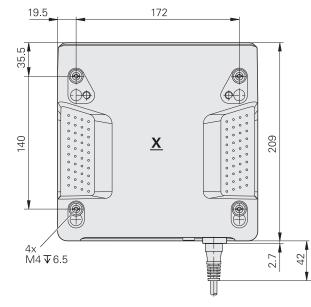

Mounting the EIB 700

The EIB 700 series was designed as a benchtop unit. It must be installed in a well-ventilated area and at a specified operating orientation.


Through threaded holes at the bottom, the EIB 700 can be fastened to a base plate with M3 screws. Two side-by-side EIB 700 units fit next to each other in a 19-inch housing, occupying one height unit. A mounting bracket is available as an accessory.





Accessories

Mounting bracket

For installation of two EIB 74x units in a 19-inch housing. ID 671144-01

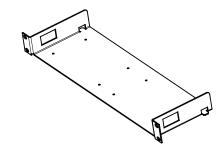

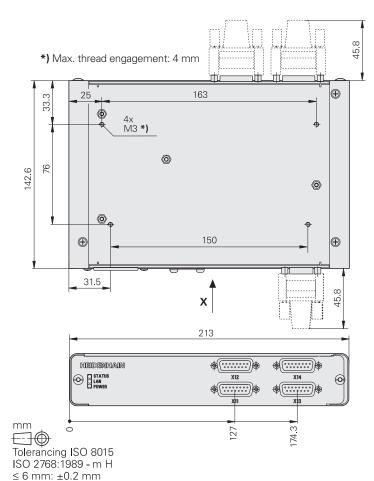

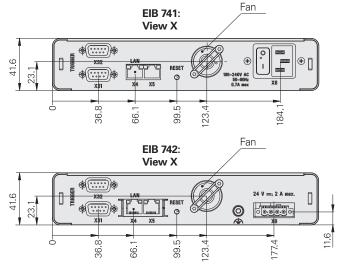

Mounting the GAGE-CHEK 2000

With the Multi-Pos or Duo-Pos stand, the GAGE-CHEK 2000 evaluation units can be set up at different angles of tilt. Mounting to the machine can be accomplished with the Multi-Pos holder or with other fastening systems featuring a 50 mm x 50 mm hole pattern.


Multi-Pos stand

For setup on and fastening to a horizontal surface (90° continuous tilt range).


ID 1089230-07



GAGE-CHEK 2000 with Multi-Pos stand

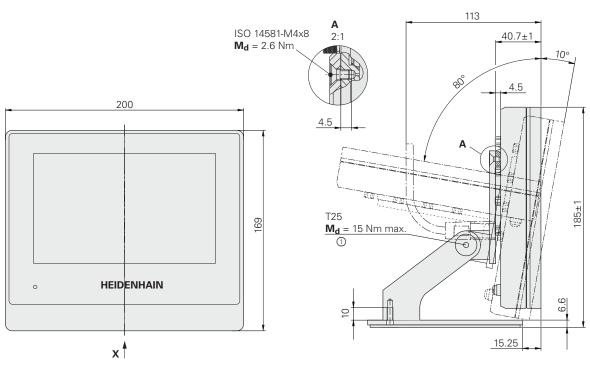

 $1 = \text{Recommended tightening torque: } M_d = 6.8 \text{ Nm}$

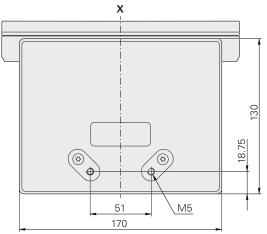


Tolerancing ISO 8015 ISO 2768:1989 - m H ≤ 6 mm: ±0.2 mm

Duo-Pos stand

For setup on and fastening to a horizontal surface (20° or 45° tilt).

ID 1089230-06

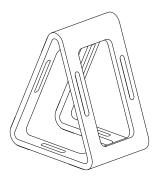

Single-Pos standIncluded in delivery.
For setup on and fastening to a surface (20° tilt).


ID 1089230-05



Multi-Pos holder


For fastening to an arm (90° continuous tilt range).

ID 1089230-08

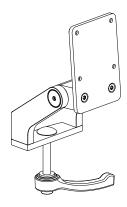

Mounting arm, straight For fastening to a machine.

ID 1089207-01



Accessory: adapter connectors

Adapter connectors for the GAGE-CHEK 2000

For pin-layout conversion from HEIDENHAINTTL to RSFTTL and Renishaw TTL. ID 1089210-01

For pin-layout conversion from HEIDENHAIN 11 μ App to HEIDENHAIN 11 μ App. ID 1089213-01

For pin-layout conversion from HEIDENHAIN 1 V_{PP} to HEIDENHAIN 1 V_{PP} . ID 1089214-01

For pin-layout conversion from HEIDENHAIN 1 Vpp to Mitutoyo 2 Vpp. ID 1089216-01

Adapter cable for the GAGE-CHEK 2000

For pin-layout conversion from the HEIDENHAIN touch-probe interface to the Renishaw touch-probe interface. ID 1095709-xx







11 µA_{PP}, 1 V_{PP}, 2 V_{PP} adapter connector

Accessory: external operating element

Although the evaluation units are easy and intuitive to operate, external control capability may be useful in certain scenarios. The foot switch is available for externally controlled operation:

Foot switch (accessory) Cable length: 2.4 m

For GAGE-CHEK 2000, with a 15-pin D-sub connector and two keys. ID 681041-04



Interfaces

Evaluation units with an integrated display

The evaluation units are equipped with interfaces for encoders, communication and external components.



	ND 280	ND 287	GAGE-CHEK 2013 GAGE-CHEK 2023 GAGE-CHEK 2093	GAGE-CHEK 2013 I/O
Encoders		·		·
1 V _{PP} /11 μA _{PP}	●/●	•/•	•	•
TTL	-	-	•	-
EnDat 2.2. ¹⁾	•	•	•	•
Touch probe	-	_	•2)	•2)
Sensor	-	Option ±10 V	-	Input: 0 V to 5 V Output: ±10 V
Data		1		
USB	Туре В	Туре В	Type A	Туре А
RS-232-C/V.24	•	•	•3)	•3)
Ethernet	-	Option	•	•
Foot switch	-	-	•	•
Switching outputs	-	6TTL	1 TTL	1 TTL 8 DC 24 V
Switching inputs	-	12TTL	4TTL	4TTL 24 HIGH DC 11 V to 30 V LOW DC 3 V to 2.2 V

^{• =} Included

^{- =} Not included

1) Purely serial, with no evaluation of incremental signals
2) HEIDENHAIN or Renishaw touch probe
3) Possible with RS-232 adapter connection via USB port

Optional assemblies for the ND 287

Various input and output assemblies are available for the evaluation unit.

Second encoder input (option)

The ND 287 evaluation unit can be equipped with an optional second encoder input.

Encoder module

Input assembly for second encoder with a 1 V_{PP} , 11 μ A $_{PP}$, or EnDat 2.2 interface. ID 654017-01

Analog input (option)

Through an optional input assembly, the ND 287 evaluation unit can be equipped with an additional analog input for connecting a sensor. The input voltage range is interpolated 4096-fold; for a sensor with ± 10 V, the resolution is therefore 5 mV. The analog module provides DC 5 V, DC 12 V and DC 24 V as supply voltage for the sensor.

The DC 5 V (B) and DC 12/24 V (A) supply voltages are galvanically isolated and must not be used at the same time. A 9-pin D-sub connector is required as a mating connector.

Analog module

Input assembly for the ± 10 V analog sensor. ID 654018-01





Pin	Assignment
1	-12 V (A)/85 mA
2	0 V (A)
3	0 V (A)
4	+12 V (A)/85 mA
5	Shield
6	0 V (B)
7	0 V (B)
8	Sensor (B) max. ±10 V
9	+5 V (B)/400 mA

Ethernet (option)

The ND 287 evaluation unit can be provided with an optional Ethernet module.

Ethernet module

ID 654019-01

This module features an Ethernet 100BaseT interface with an RJ45 connector (8-pin, female), allowing the ND 287 to be connected directly to an internal network or, with a crossover cable, to a PC.



Pin	Assignment
1	TX+
2	TX-
3	REC+
4	Do not assign
5	Do not assign
6	REC-
7	Do not assign
8	Do not assign
Housing	External shield

Switching inputs/outputs on the ND 287

Switching inputs

The ND 287 evaluation unit features numerous inputs for external operation and outputs for switching functions.

The inputs can be addressed with a pulse or a closed contact.

Exception: the switching inputs for transmitting measured values over the data interface are separate for contact and pulse.

The switching input E is active when a LOW signal U_L is applied (contact or pulse to 0 V).

Signal level

 $-0.5 \text{ V} \le U_L \le 0.9 \text{ W} \text{ with } I_L \le 6 \text{ mA}$ $3.9 \text{ V} \le U_H \le 15.0 \text{ V}$ $t_{min} \ge 30 \text{ ms}$

Zero reset / set value

Via an external signal, each axis can be set to the display value zero or to a value stored in a parameter (SET).

External control of measurement series Switching the display to MIN, MAX and DIFF

Continuously applying a LOW signal at the corresponding switching input activates the external operation of measurement series. The start of a new measurement series and the switch to the MIN/MAX/DIFF display are then externally controlled through further switching inputs.

Ignoring reference mark signals

(reference pulse lock)

When this input is active, the readout ignores all of the reference mark signals. A typical application for this is when linear measurement is performed with a rotary encoder and a lead screw.

Activating or deactivating REF mode


After switch-on or a power interruption, the digital readout can be externally switched to REF mode. The next signal then deactivates REF mode (switching function).

Display with axis coupling

The ND 287 can have an optional second encoder input. Using switching inputs, you can switch the display to individual measured values, a sum, a difference, or any logical operation.

	ND 287
Twelve switching inputs	Zero reset, clear error message Set a preset Ext. control of measurement series or display X1 ¹⁾ Start measurement series or display f (X1, X2) ¹⁾ Display minimum MIN or display X2 ¹⁾ Display maximum MAX or display X1 + X2 ¹⁾ Display difference DIFF or display X1 - X2 ¹⁾ Measured value output (pulse) Measured value output (contact) Ignore reference mark signals (input X1) Ignore reference mark signals (input X2) Activate or deactivate REF mode
Six switching outputs	Display value is "0" Measured value ≥ Switching limit A1 Measured value ≤ Switching limit A2 Measured value > Upper sorting limit Measured value < Lower sorting limit Error

¹⁾ Also selectable by parameter

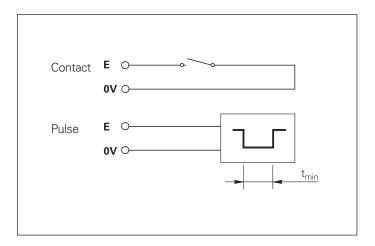

Switching outputs

The ND 287 features open-collector outputs that switch to 0 V (= Active LOW).

Delay until signal output:

 $t_V \le 20 \text{ ms}$


Signal level


Trigger points (in actual value mode) When the measured value reaches trigger points defined via parameters, the corresponding output becomes active. Up to two trigger points can be defined.


Switch-off ranges (distance-to-go mode) In distance-to-go mode, the trigger points function as switch-off ranges, appearing equidistantly from the display value "0".

Sorting limits

When the tolerance sorting limits as defined via parameters are exceeded, the corresponding outputs become active.

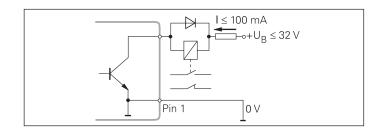

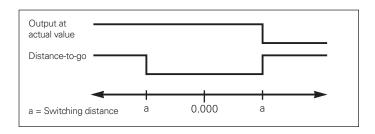

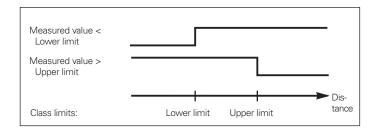



Triggering signal for an error

The ND 200 readouts constantly monitor the measuring signals, input frequency, data output, etc., displaying error messages as they arise. If errors occur that have a significant effect on a measurement or data output, the readout sets a switching output to active. This enables monitoring for automated processes.

Zero crossover

At the display value "0", the corresponding output becomes active. The minimum signal duration is 180 ms.

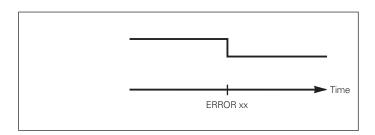

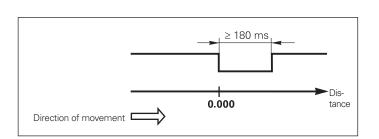

EIB 700 and IK 220 signal converters

The EIB 700 and IK 220 units feature D-sub connectors for external operation and the connection of encoders.

With the IK 220, the encoder signals can be routed out over an additional slot cover and are available as 11 µA current signals for further processing in evaluation electronics or EXE pulse-shaping electronics. An additional slot cover holds the connections for the external inputs/outputs (e.g., for storing the measured values).


	EIB 700	IK 220
Encoder inputs		
1 V _{PP}	4 ¹⁾	2 ¹⁾
11 μΑρρ	4 ¹⁾	2 ¹⁾
EnDat 2.1	4 ¹⁾	2 ¹⁾
EnDat 2.2	4 ¹⁾	-
SSI	-	2 ¹⁾
Encoder outputs		
11 μA _{PP}	-	2 (optional assembly)
Trigger input	4	2 (optional assembly)
Trigger output	4	2 (optional assembly)
Logic inputs/outputs	4/4 ²⁾	2/-

¹⁾ Selectable ²⁾ Can also be used as a trigger, or as a logic input or output

Accessories

External inputs/outputs for the IK 220 Slot cover with two 9-pin D-sub connections (male). ID 340253-01

Output assembly for the IK 220 Slot cover with two 9-pin D-sub connections (male), for forwarding the encoder signals (11 µA_{PP}) to the downstream electronics. ID 340252-01

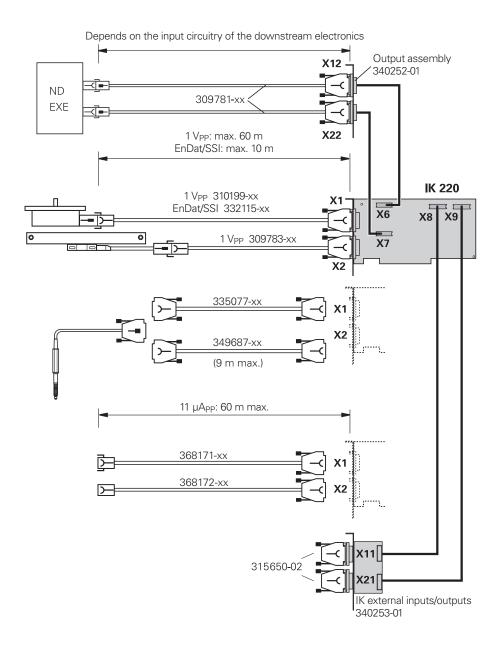

Encoder inputs

The evaluation electronics are equipped with interfaces for connecting HEIDENHAIN encoders. Other interfaces are available upon request.

Pin layout for \sim 1 V_{PP}

15-pin D-sub	15-pin D-sub flange socket (female)													
8 7 6 5 4 3 2 1 0 5 0 0 0 0 0 0 0 15 14 3 12 11 10 9 0 6 0 0 0 0 0 0 0														
		Power	supply		Incremental signals									
—	4	12	2	10	1	9	3	11	14	7	5/6/8/ 13/15			
∼1V _{PP}	U _P	Sensor U _P	0 V	Sensor 0 V	A+	A-	B+	B-	R+	R-	/			

 $\textbf{Cable shield} \ \text{connected to housing;} \ \textbf{U}_{\textbf{P}} = \text{Power supply voltage}$

Sensor: The sense line is connected in the encoder with the corresponding power line.

Vacant pins or wires must not be used.

Pin layout for □□□□□

9-pin D-sub f	9-pin D-sub flange socket (female)													
			>		$ \begin{pmatrix} 5 & 4 & 3 & 2 & 1 \\ 0 & 0 & 0 & 0 & 0 \\ 9 & 8 & 7 & 6 \\ 0 & 0 & 0 & 0 \\ \end{pmatrix} $									
	Power	supply			Incremen		Others							
—	7	6	2	3	4	5	9	8	1					
г⊔πι	U _P	0 V	U _{a1}	U _{a1}	U _{a2}	U _{a2}	U _{a0}	U _{a0}	/					

 $\textbf{Cable shield} \ \text{connected to housing;} \ \textbf{U}_{\textbf{P}} = \text{Power supply voltage}$

Vacant pins or wires must not be used!

Pin layout of the ND 200 and GAGE-CHEK series with \sim 1 V_{PP}/ \sim 11 μ A_{PP}/EnDat

15-pin D-sub	15-pin D-sub flange socket (female)														
	8 7 6 5 6 3 3 6 b 0 15 14 13 12 11 10 9 0 15 14 13 12 11 10 9														
	Power supply						In	cremen	tal signa	als		5	Serial dat	ta transfe	er
—	4	12	2	10	6	1	9	3	11	14	7	5	13	8	15
\sim 1 V_{PP}	U _P	Sensor U _P	0 V	Sensor 0 V	/	A+	A –	B+	B-	R+	R–	/	/	/	/
∼ 11 µA _{PP}	•—	•	•—	1	Internal shield	I ₁₊	I ₁₋	l ₂₊	l ₂₋	I ₀₊	I ₀₋	/	/	/	/
EnDat						/	/	/	/	/	/	DATA	DATA	CLOCK	CLOCK

Shield on housing; **U**_P = Power supply voltage

Sensor: The sense line is connected in the encoder with the corresponding power line.

Vacant pins or wires must not be used!

Pin layout of the EIB 700 series with \sim 1 V_{PP}

15-pin D-sub flange socket (female)														
				>—	-		8010	7 6 5 4 3 0 0 0 0 0 5 14 13 12 11 0 0 0 0	3 2 1 0 0 0 10 9 0 0					
		Power	supply				In	cremen		Others				
—	4	12	2	10	6	1	9	3	11	14	7	8	6	5/13/15
\sim 1 V_{PP}	U _P	Sensor U _P	0 V	Sensor 0 V	/	A+	A –	B+	B-	R+	R–	L1/H ¹⁾	L2/L ¹⁾	/
∼ 11 μA _{PP}	•		•	•	Internal shield	I ₁₊	l ₁₋	l ₂₊	l ₂₋	l ₀₊	I ₀ _	/	/	/

Shield on housing; **U**_P = Power supply voltage

Sensor: The sense line is connected in the encoder with the corresponding power line.

Vacant pins or wires must not be used!

¹⁾ Pins for homing or limit signals if supported by the encoder

Pin layout of the EIB 700 series with EnDat

15-pin D-sub	15-pin D-sub flange socket (female)														
				>-	_		(8 7 6 5 4 0 0 0 0 0 15 14 13 12 1 0 0 0 0	3 2 1 0 0 0 1 10 9						
	Power supply					In	crement	al signals	1)	Serial data transfer				Others	
—	4	12	2	10	6	1	9	3	11	5	13	8	15	7/14	
EnDat	U _P	Sensor Up	0 V •	Sensor 0 V	Internal shield	A+	A-	B+	B-	DATA	DATA	CLOCK	CLOCK	/	

Shield on housing; $\mathbf{U_P} = \text{Power supply voltage}$

Sensor: The sense line is connected in the encoder with the corresponding power line. Vacant pins or wires must not be used!

1) For encoders with ordering designations EnDat01 and EnDat02

Pin layout of the IK 220

15-pin D-sub			nale)													
		·	·	•	-			1 2 3 9 10	11 12 13 14 1	8 5 5						
		Power	supply				In	cremen	tal signa	als		5	Serial data transfer			
_	1	9	2	11	13	3	4	6	7	10	12	5	8	14	15	
∕ 11 μA _{PP}	U _P	Sensor 5 V	U N	Sensor 0 V	Internal shield	I ₁₊	I ₁₋	l ₂₊	l ₂₋	I ₀₊	I ₀₋	/	/	/	1	
\sim 1 V_{PP}	•—	•	•—	•	ooid	A+	A –	B+	B-	R+	R-	/	/	/	/	
EnDat SSI						A+	A –	B+	B-	/	/	DATA	DATA	CLOCK	CLOCK	

Shield on connector housing

Vacant pins or wires must not be used!

EIB application software for the EIB 700

The EIB application software covers two purposes:


Configuring and demonstrating the EIB 700

- Easy configuration of settings required for operating the EIB 700 (e.g., input interface, data packets, operating mode, trigger settings)
- Management of one or more EIB 700 units
- Simple depiction of the positions transmitted by the EIB 700
- Saving of settings for management of different application projects

For more information, please refer to the User's Guide.

Platform for customized applications

The EIB application software is provided as source code, thereby allowing customers to rapidly implement their own applications. The application software was programmed using C++/CLI and Windows Forms in Visual Studio 2008. This programming environment is widely used in technical application programming but does not necessarily provide state-of-the-art user interfaces such as those in Windows 10. However, adaptation to other graphical interfaces can be performed by the customer.

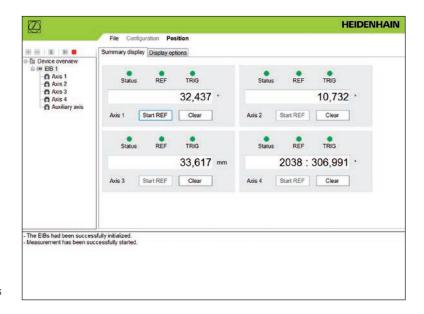



HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

+49 8669 31-0 FAX +49 8669 32-5061 E-mail: info@heidenhain.de

www.heidenhain.de

Vollständige und weitere Adressen siehe www.heidenhain.de For complete and further addresses see www.heidenhain.com

HEIDENHAIN Vertrieb Deutschland DF

E-Mail: hd@heidenhain.de

HEIDENHAINTechnisches Büro Nord

12681 Berlin, Deutschland © 030 54705-240

HEIDENHAIN Technisches Büro Mitte

07751 Jena, Deutschland **2** 03641 4728-250

HEIDENHAIN Technisches Büro West

44379 Dortmund, Deutschland 0231 618083-0

HEIDENHAIN Technisches Büro Südwest

70771 Leinfelden-Echterdingen, Deutschland **2** 0711 993395-0

HEIDENHAIN Technisches Büro Südost

83301 Traunreut, Deutschland

© 08669 31-1337

NAKASE SRL. AR

B1653AOX Villa Ballester, Argentina www.heidenhain.com.ar

HEIDENHAIN Techn. Büro Österreich AT

83301 Traunreut, Germany www.heidenhain.de

FCR MOTION TECHNOLOGY PTY LTD AU

Ravenhall Victoria 3023, Australia E-mail: sales@fcrmotion.com

HEIDENHAIN NV BE

> 1760 Roosdaal, Belgium www.heidenhain.be

BG ESD Bulgaria Ltd.

Sofia 1172, Bulgaria www.esd.bg

BR **HEIDENHAIN Brasil Ltda.**

04763-070 - São Paulo - SP, Brazil www.heidenhain.com.br

GERTNER Service BY

220026 Minsk, Belarus www.heidenhain.by

HEIDENHAIN CORPORATION CA

Mississauga, OntarioL5T2N2, Canada www.heidenhain.com

HEIDENHAIN (SCHWEIZ) AG CH

8603 Schwerzenbach, Switzerland www.heidenhain.ch

CN DR. JOHANNES HEIDENHAIN (CHINA) Co., Ltd.

Beijing 101312, China www.heidenhain.com.cn

CZ HEIDENHAIN s.r.o.

102 00 Praha 10, Czech Republic www.heidenhain.cz

Denmark → SE DK

FARRESA ELECTRONICA S.A. ES

08028 Barcelona, Spain www.farresa.es

FI **HEIDENHAIN Scandinavia AB**

01740 Vantaa, Finland www.heidenhain.fi

HEIDENHAIN FRANCE sarl FR

92310 Sèvres, France www.heidenhain.fr

GB

HEIDENHAIN (G.B.) LimitedBurgess Hill RH15 9RD, United Kingdom www.heidenhain.co.uk

MB Milionis Vassilis GR

17341 Athens, Greece www.heidenhain.gr

HR Croatia → SL

HEIDENHAIN Kereskedelmi Képviselet HU

1239 Budapest, Hungary www.heidenhain.hu

ID PT Servitama Era Toolsindo

Jakarta 13930, Indonesia E-mail: ptset@group.gts.co.id

IL NEUMO VARGUS MARKETING LTD.

Holon, 5885948, Israel

E-mail: neumo@neumo-vargus.co.il

IN **HEIDENHAIN Optics & Electronics India Private Limited**

Chetpet, Chennai 600 031, India www.heidenhain.in

HEIDENHAIN ITALIANA S.r.I. IT

20128 Milano, Italy www.heidenhain.it

JP HEIDENHAIN K.K.

Tokyo 102-0083, Japan www.heidenhain.co.jp

KR **HEIDENHAIN Korea Ltd.**

Anyang-si, Gyeonggi-do, 14087 South Korea www.heidenhain.co.kr

HEIDENHAIN CORPORATION MEXICO MX

CP 20230 Aguascalientes, AGS., Mexico E-mail: infomexico@heidenhain.com

ISOSERVE SDN. BHD. MY

43200 Balakong, Selangor E-mail: sales@isoserve.com.my

NL HEIDENHAIN NEDERLAND B.V.

6716 BM Ede, Netherlands www.heidenhain.nl

NO **HEIDENHAIN Scandinavia AB**

7300 Orkanger, Norway www.heidenhain.no

Llama ENGINEERING Ltd ΝZ

Lower Hutt 5010, New Zealand E-mail: heidenhain@llamaengineering.co.nz

MACHINEBANKS' CORPORATION PH

Quezon City, Philippines 1113 E-mail: info@machinebanks.com

ы

02-384 Warszawa, Poland www.heidenhain.pl

FARRESA ELECTRÓNICA, LDA. PT

4470 - 177 Maia, Portugal www.farresa.pt

RO **HEIDENHAIN Reprezentantă Romania**

Braşov, 500407, Romania www.heidenhain.ro

RS Serbia → BG

RU **GERTNER Service**

119002 Moscow, Russian Federation www.heidenhain.ru

SE **HEIDENHAIN Scandinavia AB**

12739 Skärholmen, Sweden www.heidenhain.se

SG **HEIDENHAIN PACIFIC PTE LTD**

Singapore 408593 www.heidenhain.com.sg

SK KOPRETINATN s.r.o.

91101 Trencin, Slovakia www.kopretina.sk

NAVO d.o.o. SL

2000 Maribor, Slovenia www.heidenhain.si

TH HEIDENHAIN (THAILAND) LTD

Bangkok 10250, Thailand www.heidenhain.co.th

TR T&M Mühendislik San. ve Tic. LTD. ŞTİ.

34775 Y. Dudullu – Ümraniye-Istanbul, Turkey www.heidenhain.com.tr

TW HEIDENHAIN CO., LTD.

Taichung 40768, Taiwan www.heidenhain.com.tw

GERTNER Service UA

02094 Kiev, Ukraine www.heidenhain.ua

US HEIDENHAIN CORPORATION

Schaumburg, IL 60173-5337, USA www.heidenhain.us

VN AMS Co. Ltd

HCM City, Vietnam E-mail: davidgoh@amsvn.com

ZΑ MAFEMA SALES SERVICES C.C.

Kyalami 1684, South Africa www.heidenhain.co.za